

Repeat Play set-up instructions for Magnavox 13” DVD Player Serial #MWC13D6

This is a unit we have recently found at WalMart for \$99.78. Testing so far shows that it works well. The Magnavox brand is one we have used extensively in the past and been very satisfied with. Only time will tell if this one holds up as well.

An INSTRUCTION CARD (to aid Shop Personnel in turning on the Video) can be made by printing the image below on a heavy paper, or laminating it, and keeping it available near the Video Player. ▼

On the image below we have tried to show the Set-Up sequence on the remote. These numbers can be marked on the Remote with a “Sharpie”. Not real professional looking, but it helps. ▼

to play:

- 1 - **STANDBY-ON**

(when “snowy” picture appears)
press:

- 2 - **PLAY**

(Picture sometimes comes on when building power is turned on. If picture is already on, just move to “Repeat” instructions below.)

to set for repeat:

(after picture appears)

- 3 - **MODE**

press 7 times
(until “OFF REPEAT” line shows on screen).

- 4 - **▼** at bottom of remote

press 2 times
(until “TITLE (REPEAT)” shows on screen).

- 5 - **RETURN**

ends instructions and deletes words on screen, (or words will disappear automatically after 1 minute).

GO SLOW!

